



OKE - Process improvement
Sample: Upholstered suit element

Upholstered suit element



Upholstered suit element armrest




2040-000 5009-080

2040-000 + 3604-915

2040-000



Upholstered suit element frame

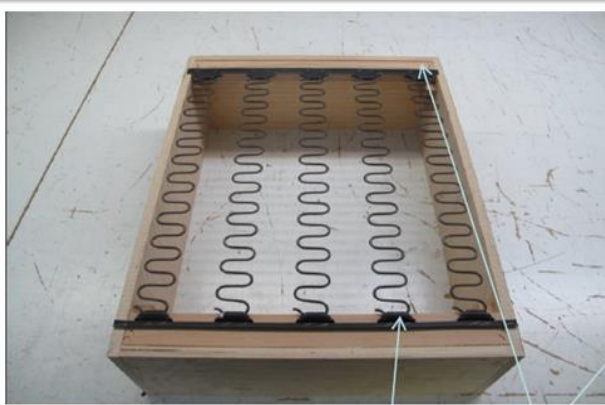


4900-100



4900-100

5009-140


2298-000

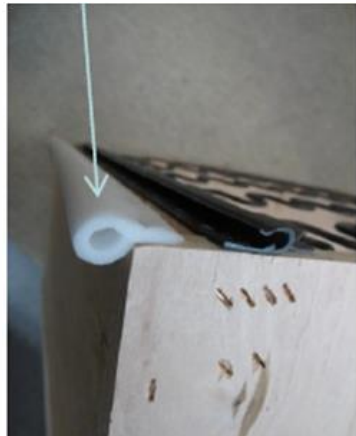

2298-000

5009-140

Upholstered suit element backside

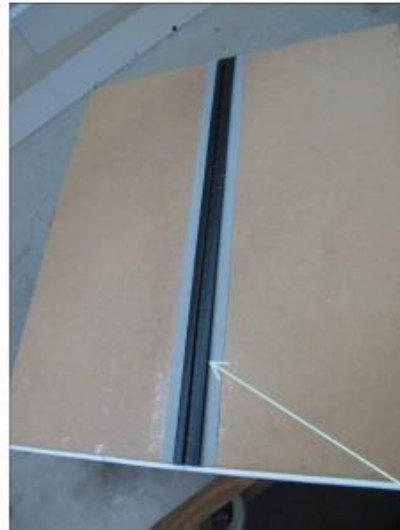

2023-S400



2023-S400 + 2023-510

Upholstered suit element backrest




27840-120



Upholstered suit element seat





3604-915 + 4370-036

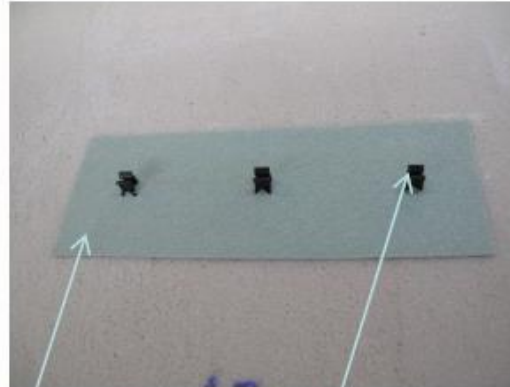


5980-0001

4370-036

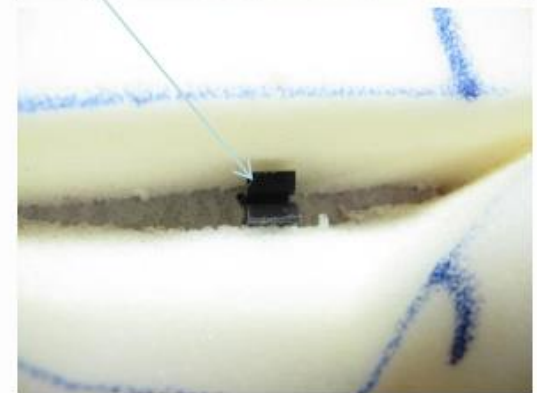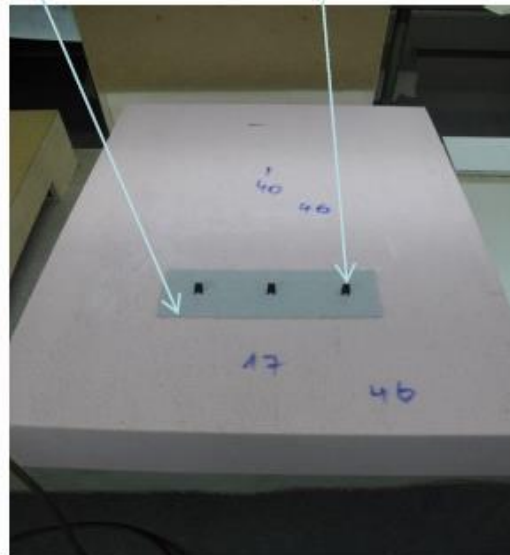

Upholstered suit element headrest

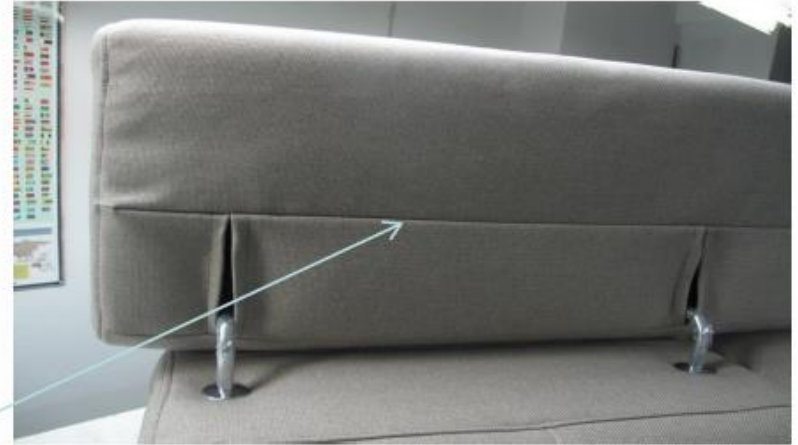

2298-xxx + 2297-xxx

