



OKE - Process improvement
Sample: Recliner

Recliner




- Recliner Armrest left side



2040-000 + 3604-915

4370-036 + 3604-000




■ Recliner Armrest left side

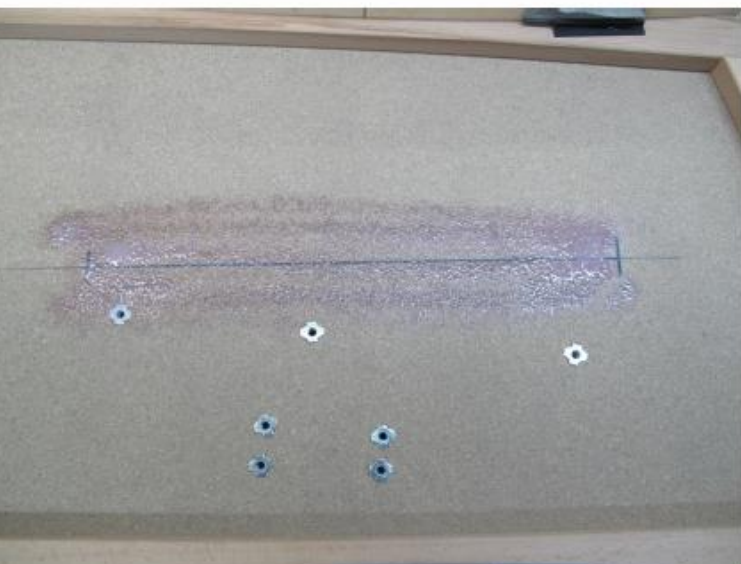


5980-0001

4370-036



2040-000

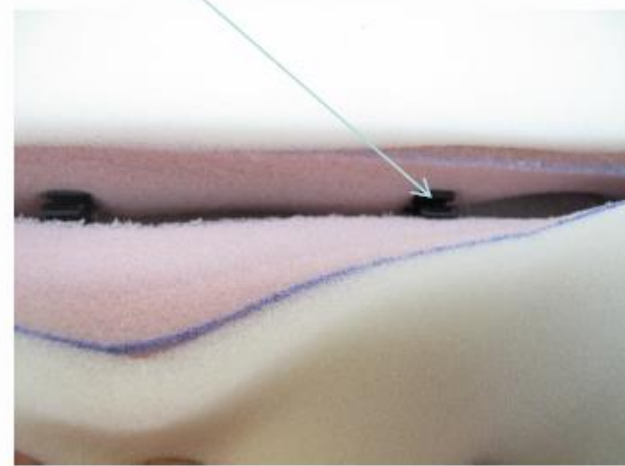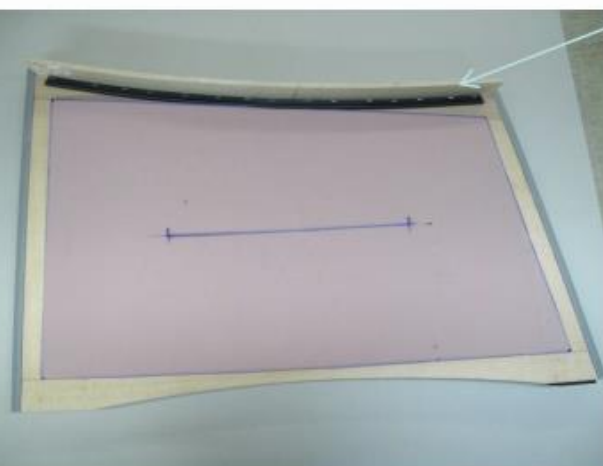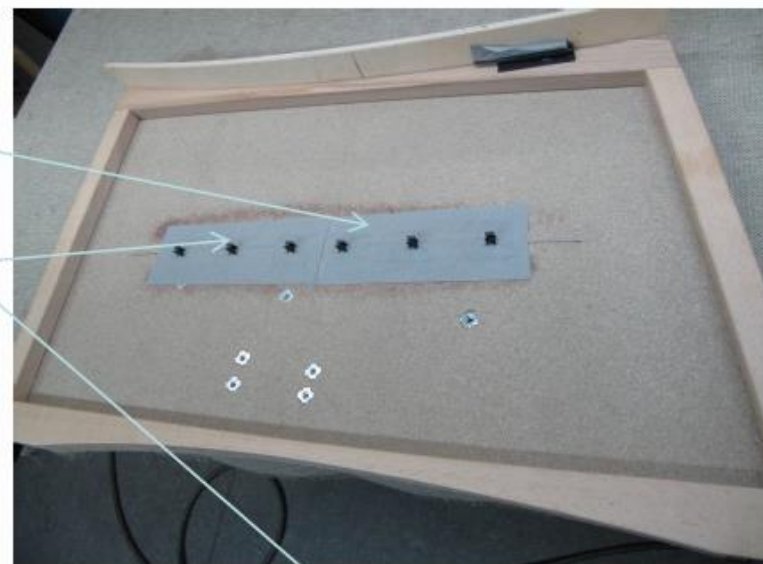

- Recliner Armrest left side

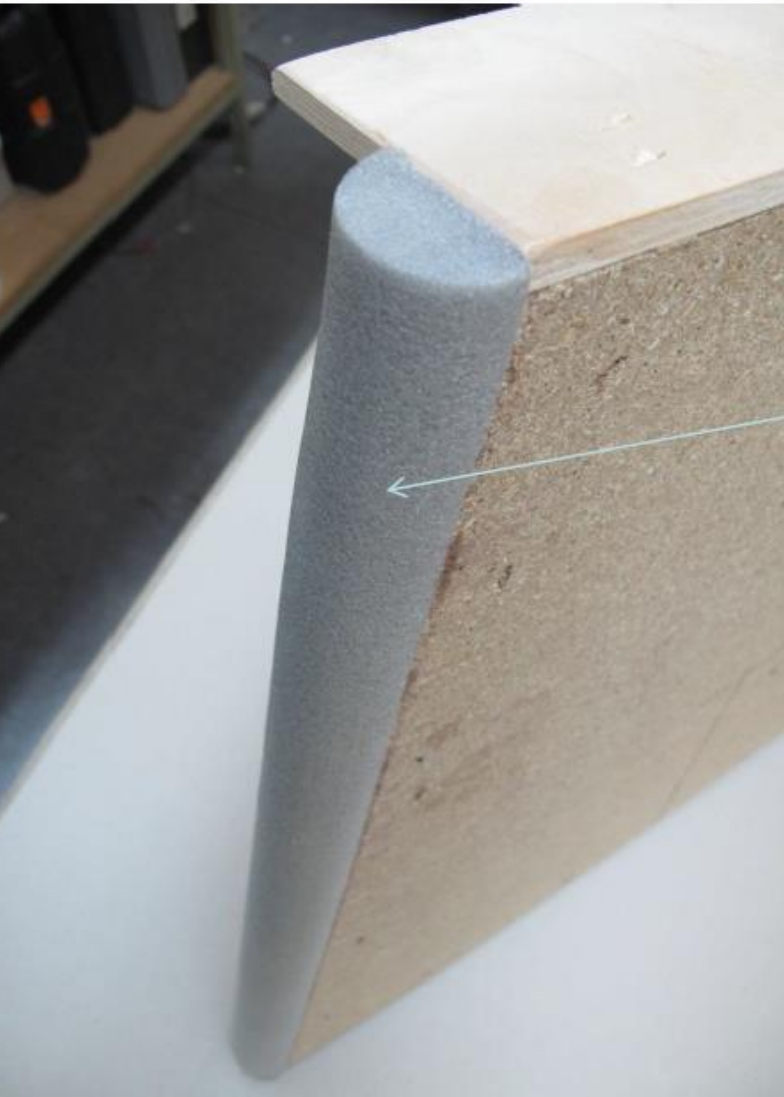

5111-040

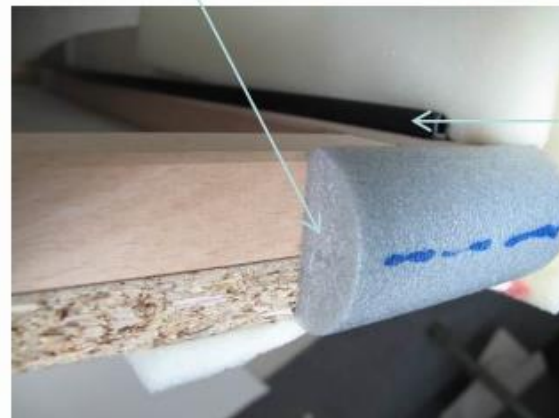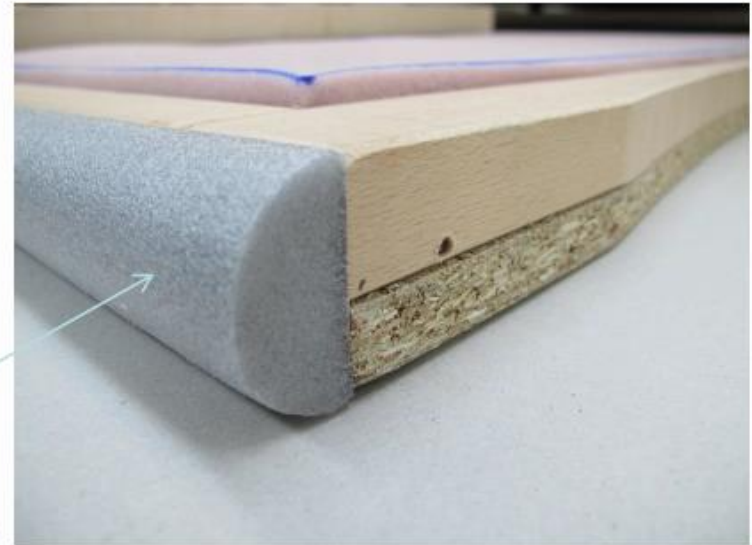

2040-000

- Recliner Armrest left side



3604-915


4370-036
2040-000




■ Recliner Armrest right side




■ Recliner Armrest right side

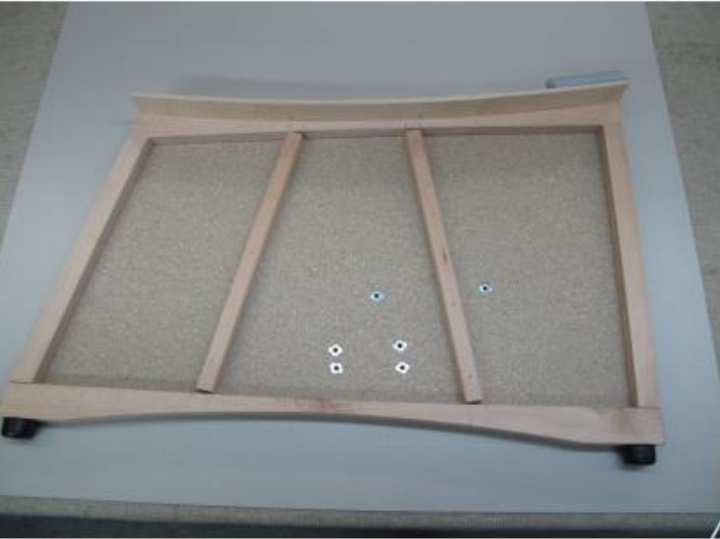

5111-100

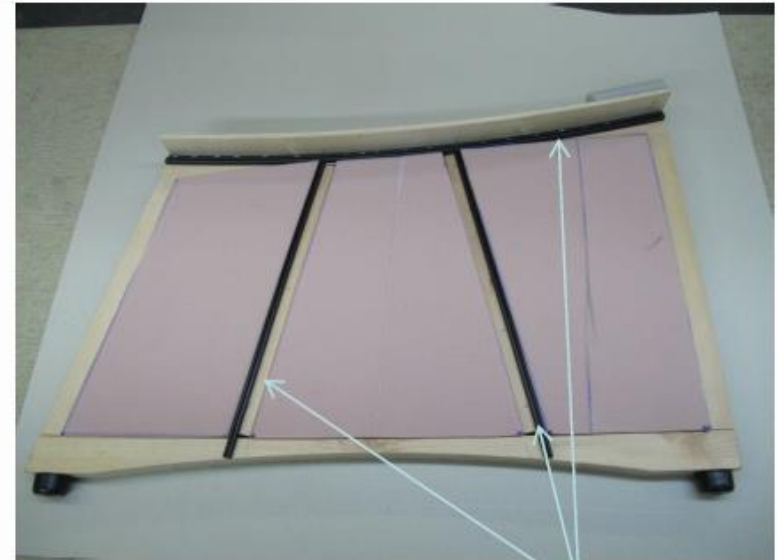

2040-000

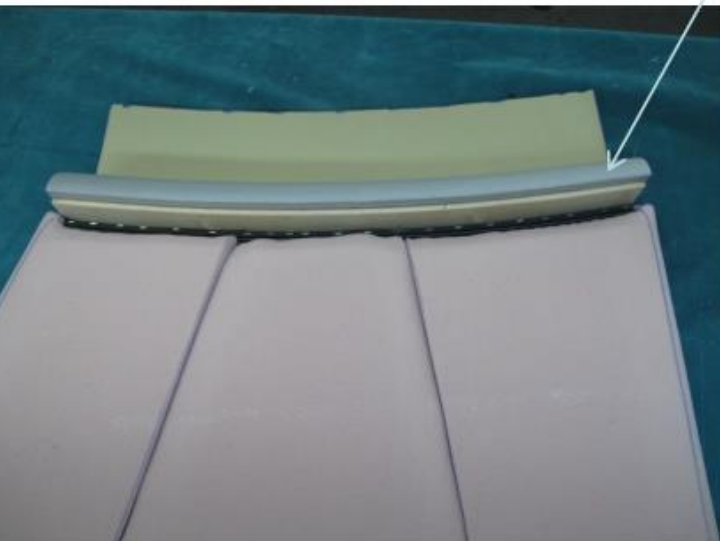

■ Recliner Armrest right side



3604-915 + 2040-000

2271-000 + 2023-510




4551-001

Recliner Seat



27840-120

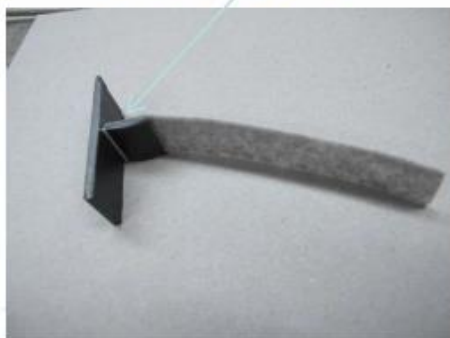

Recliner Seat



4900-100



4900-100

2704-000




Recliner Seat



2298-xxx



2298-xxx + 2297-xxx

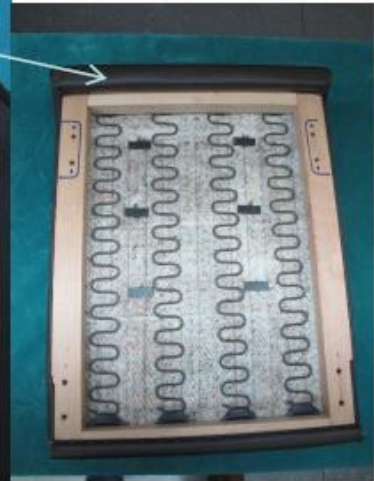

1107-150

Recliner Backrest



4370-036 + 3604-915 with design piping cord




Recliner Backrest



4370-036


5980-0001

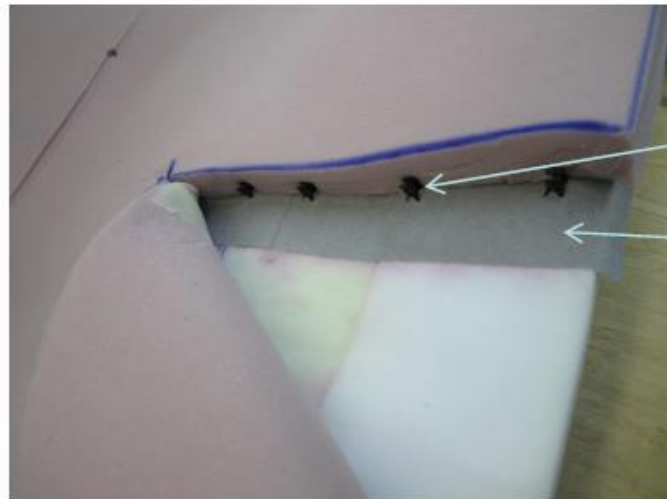

4370-036

5980-0001

2792-601

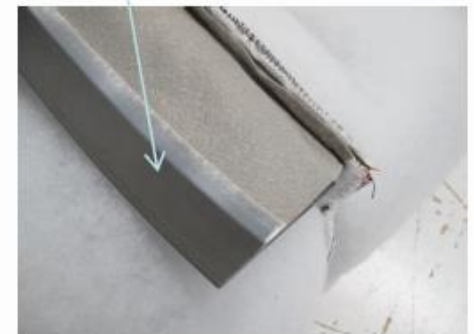

Recliner Backrest from backside




2023-S400 + 2023-506



Recliner Backrest from backside



2023-S400

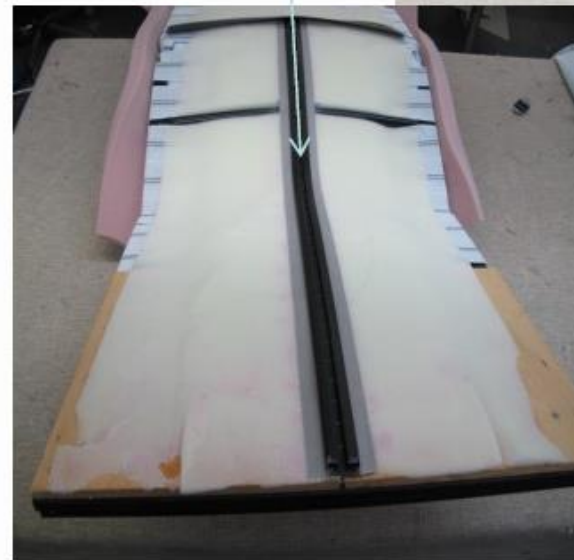

Recliner Backrest from backside



2792-601



2023-506





Recliner Footrest



2700-000



Recliner Footrest

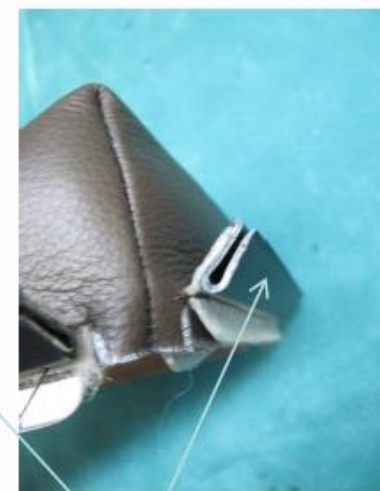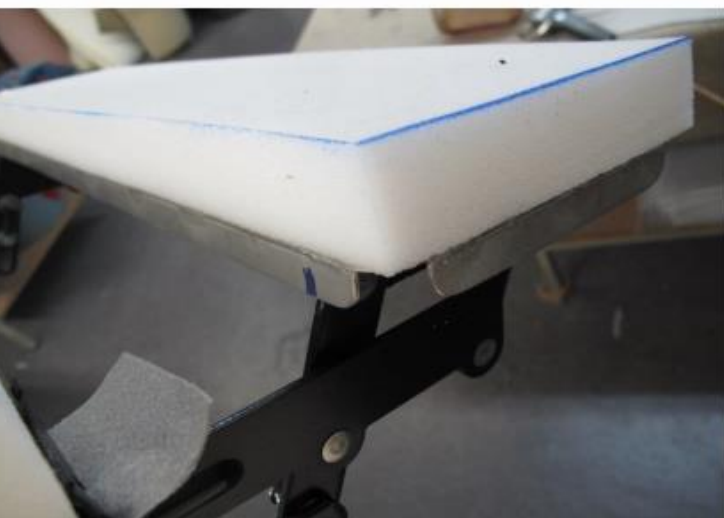

2700-000

