


Sample couch – seat on the left

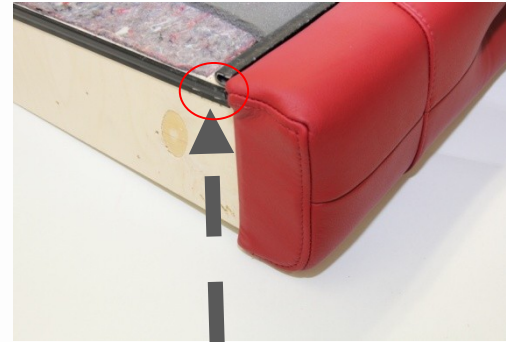

2655 




4370-034 




2040 



3604 

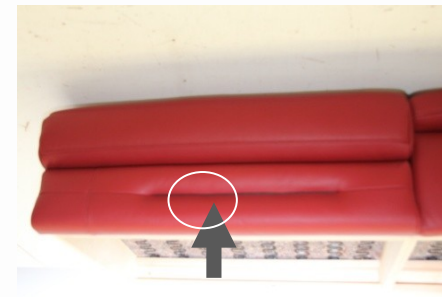


Sample couch – back left and right

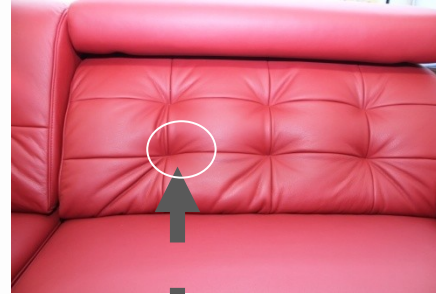



27840-120



4370-031

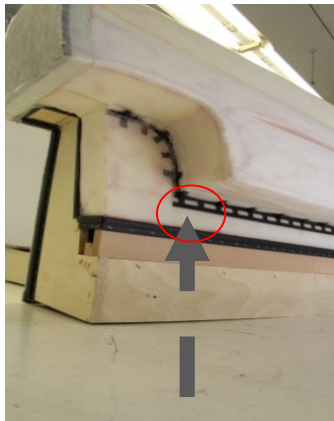

4370-032

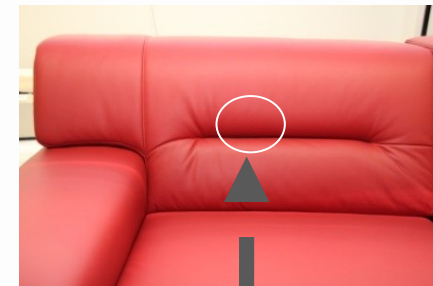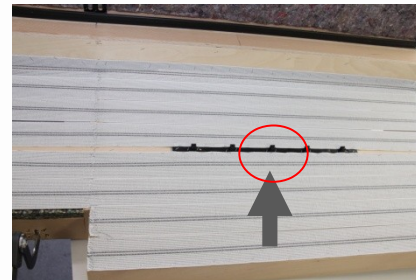


3604 / 3695




Sample couch - armrest on the right




4370-031

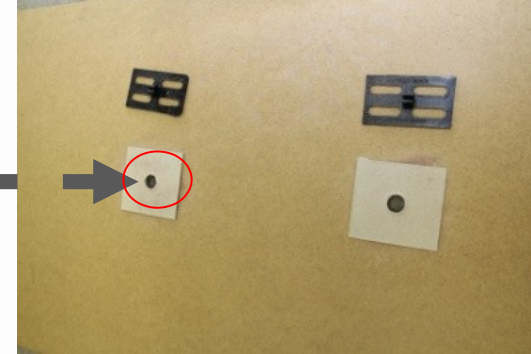



pre-drilled
foam holes

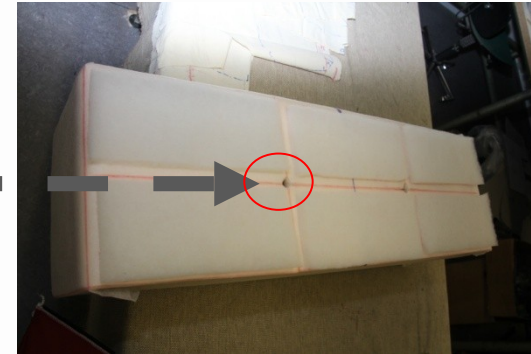


striking
tufting

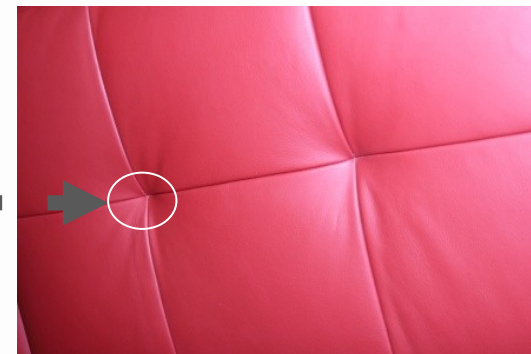

Sample couch – armrest on the left

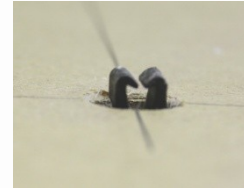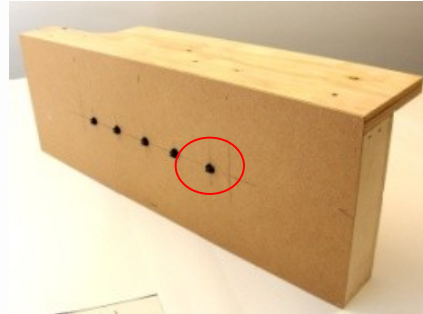


4370-032

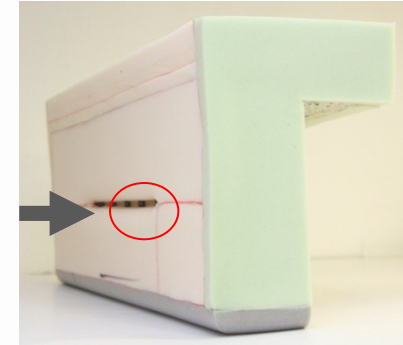

2835



2781

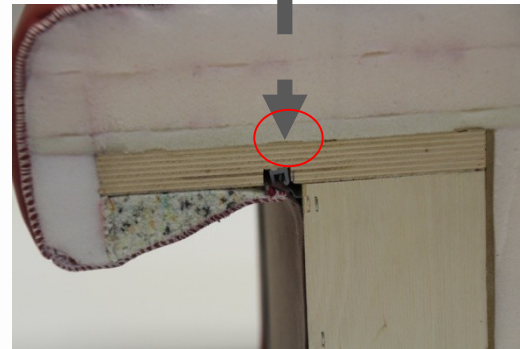

exact lines



Sample armrest

